

# Oil Changes



**WARNING: Do not attempt to change the oil in your Fun-Kart while the engine is still hot.**

## ENGINE OIL

1. Locate the engine oil drain tube on the forward facing side of the engine.
2. Remove the plug bolt at the end of the tube and remove the screw holding the tube to the engine.
3. Move the loose end of the drain tube down below the engine and allow oil to drain into a catch pan.
4. Once the oil has drained, reinstall the screw and the plug bolt.
5. Add SAE 10W-30 motor oil to the engine through the fill hole until the level is at least 2/3 of the way up the dipstick. DO NOT attempt to add more oil than the engine can accommodate with the fill plug removed. The approximate engine oil capacity is 8 fl. oz.
6. Reinstall the dipstick.

## GEAR OIL

There is no way to check the gear oil level without draining the gearbox.

1. Remove the chain guard.
2. Locate the fill plug and the drain plug. The fill plug is directly on top of the gear case and the drain plug is on the underside of the gear case.
3. Remove the drain plug and then the fill plug. Oil may not drain unless the fill plug is removed along with the drain plug.
4. When the oil has finished draining, reinstall the drain plug and add 3 fl. oz. of SAE 80W-90 gear oil.
5. Reinstall the fill plug and the chain cover.