Operator's Manual SUPPLEMENT Model No. 386B-17

WARNING:

Read Engine
Owner's Manual,
Vehicle Operator's
Manual, and
Supplement
Carefully Before
Operating Vehicle.


Parts List






THIS VEHICLE IS FOR OFF-ROAD USE ONLY

BEFORE OPERATING THIS VEHICLE, THE OWNER AND/OR OPERATOR MUST UNDERSTAND THE VEHICLE WAS NOT DESIGNED OR MANUFACTURED TO MEET SPECIFICATIONS FOR USE ON STREETS, HIGHWAYS, OR THOROUGHFARES AND HAVE READ AND HAVE AN UNDERSTANDING OF ALL THE INSTRUCTIONS FOR SAFE ASSEMBLY AND OPERATION AS WELL AS THE INSTRUCTIONS GOVERNING THE ENGINE AND OTHER PORTIONS OF THE VEHICLE.

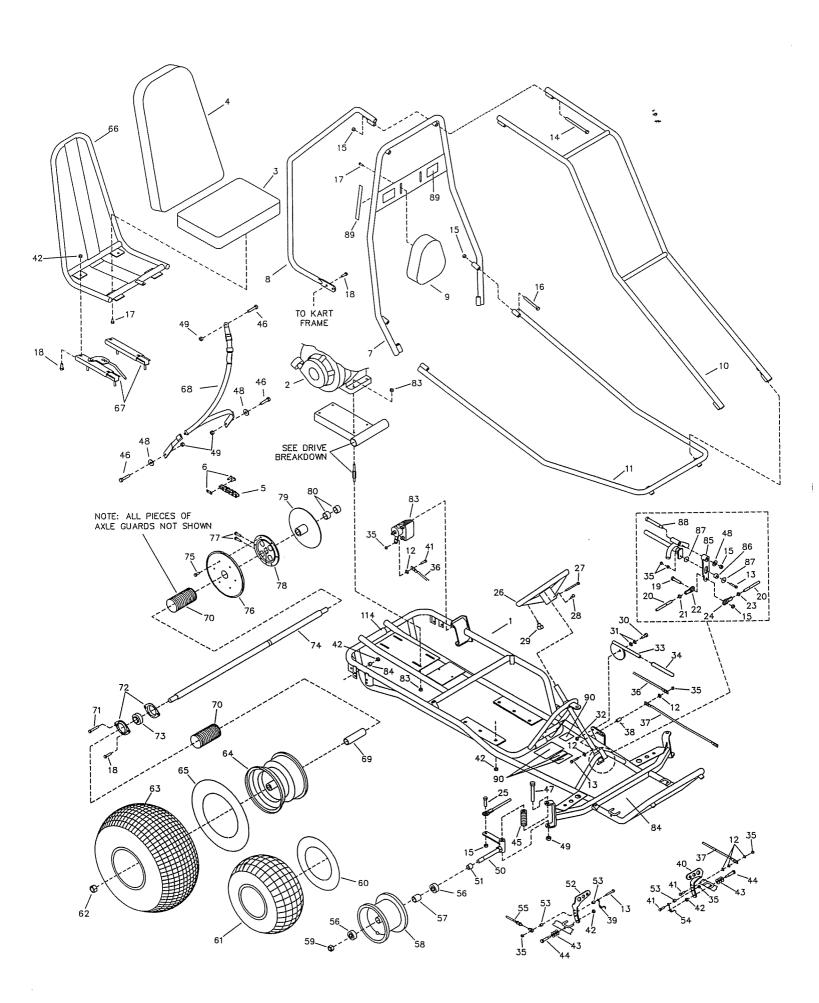

CALIPER BREAKDOWN	
e, ** 11	3)
	7
10′ 👋	

3 3928 Backing Plate 4 3930 Actuator Pin 5 3931 Adjuster Pin 6 3932 Nut, Jam 7 9158 Bolt, 3/8-16 x 2-1/4" 8 9085 Nut, 3/8-16 Toplock	4 5 6 7 8 ASM 9	3930 3931 3932 9158 9085 6534	Actuator Pin Adjuster Pin Nut, Jam Bolt, 3/8-16 x 2-1/4" Nut, 3/8-16 Toplock MB-1 Service Kit (incl. 9-11) Groove Pin Lever
--	--	--	---

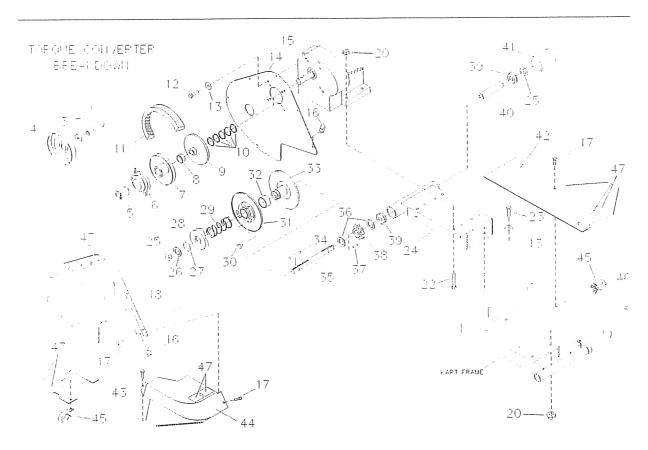

REF. NO 1 2 3 ASM	PART NO 8204 1124 1398 5957	DESCRIPTION Bolt, 5/16-24 x 2-1/4" Washer, 5/16 Split Lock Washer, 21/64 ID Fender Driver Pulley Assembly (incl. REF. 4-9)	REF. NO 21 22 23 24	PART NO 9186 2264 8908	DESCRIPTION Bolt, 5/16-18 X 1-1/2" Bolt, 5/16-18 X 3/4" Chassis	REF. NO 41 42 43 44	PART NO 8194 8265 8260 8259	DESCRIPTION Cap, Plastic Right Deck Cover Left Deck Cover Caliper Cover
4	*	Drum	25	9155	Nut, 5/8-11 Jam	45	8266	Loop Clip
5	*	Hub	26	8193	Washer, Cup	46	8227	Clip Nut
6	*	Shoe Assembly	ASM	8191	Driven Pulley Assembly	47	11330	Decal Sheet, Main Frame and
7	*	Moveable Sheave			(incl. REF. 27-33)			Engine Warnings
8	200349	Bushing	27	2477	Retaining Ring			
9	*	Stationary Sheave	28	*	Cam			
10	1194	Washer, 3/4 Flat	29	6805	Spring			le Separately
11	8192	Belt, Asymmetrical	30	6804	Button, Nylon		M = Assemb	
12	9101	Bolt, 5/16-24 x 1/2"	31	*	Moveable Sheave	NI :	= Not Illustra	ated
13	9060	Washer, 5/16 Plain	32	*	Bushing			
14	8200	Cover Panel	33	*	Stationary Sheave			
15	5533	Engine, 6hp Tecumseh	34	3403	Key, 3/16sq x 2"			
16	2449	Nut, Tinnerman	35	8219	Jackshaft			
17	9006	Bolt, 1/4-20 x 1/2" Whiz	36	1119	Spacer, 5/8ID x 1/8"			
		Flange	37	1031	Key, 3/16sq x 1/2"			
18	8199	Cover	38	1125S	Sprocket, 9T #420			
19			39	5090	Bearing			
20	1263	Nut, 5/16-18 Flange	40	2430	Spanner			

		REPAIR PA			
REF.	PART		REF.	PART	
<u>NO.</u>	<u>NO.</u>	DESCRIPTION	NO.	NO.	<u>DESCRIPTION</u>
1	10711-36	Frame	67	6734	Seat Slide - pair
2	5533	Engine, 6HP Tecumseh	68	8778	Seat Belt Shoulder / Lap
3	5557	Seat Bottom	69	4659-16	Spacer, 1" ID x 3-3/4"
4	8748	Seat Back	70	K388-38	Axle Guard Repair Kit
5	9343	Chain, 420 x 72 Links (incl. 6)	71	6573	Bolt, 5/16-18 x 1-3/4"
6	2037	Master Link, 420 Chain	72	6617	Bearing Flange
7	11383-36	Center Bar	73	3941H	Bearing, 1" ID
8	8702-36	Rear Bar	74	8223H	Axle Shaft
9	6320	Headrest	ASM	6420H	Sprocket Asm. (incl. 75-78)
10	10705-36	Overhead Bar	75	9006	Bolt, 1/4-20 x 1/2" Flanged Whiz
11	8710-36	Front Bar	76	6282	Sprocket, 420 x 54 Teeth
12	1854	Washer, No. 14 Flat	77	6701	Bolt, 5/16 x 1-1/4" Socket Head
13	1849	Bolt, 1/4-20 x 1-1/2"	78	6280H	Sprocket Hub
14	6452	Bolt, 3/8-16 x 5"	79	6314H	Brake Rotor
15	9085	Nut, 3/8-16 Toplock	80	2265-16	Spacer, 1" ID x 3/4"
16	2386	Bolt, 3/8-16 x 3-1/2"	81	1263	Nut, 5/16-18 Flanged Whiz
17	5839	Bolt, 1/4-20 x 3/4" Flanged Whiz	82	9674-16	Spacer, 3/8 ID x 3/8"
18	9176	Bolt, 5/16-18 x 1"	83	8197	Brake Caliper Asm.
19	9145	Bolt, 3/8-16 x 1-3/4"	84	1441	Decal, Front Floor Pan Scuff
ASM	6430	Tie Rod Asm. (incl. 20-24)	85	9834-2	Steering Crank Weldment
20	6431	Tie Rod	86	9873	Cam Follower Bearing
21	9092	Nut, 3/8-24 RH Jam	87	9872	Washer, 1/4 Flat
22	1414	Rod End - RH Thread	88	9871	Shoulder Bolt, 1/2 x 3"
23	9024	Nut, 3/8-24 LH Jam	89	10329	Decal Sheet, Center Bar Warnings
24	1415	Rod End - LH Thread	90	10330	Decal Sheet, Main Frame and Engine Warnings
25	9146	Bolt, 3/8-16 x 1-1/2"	NI	11377	Fender, Right
26	6038	Steering Wheel	NI	11378	Fender, Left Loop Clip, 1-1/4" (fender mounting)
27	9080	Bolt, 1/4-20 x 2-3/4"	NI	11387	Reflector
28	9160 9799	Bolt, 1/4-20 x 7/8" Nylock Stop Switch Asm	NI	11272	Reflector
29 30	9172	Bolt, 3/8 x 1/4 Shoulder	NI	9247R5	Assembly Instructions
31	6441	Washer, 3/8 ID Spring	NI	6477	Dingo Operator's Manual
32	6440	Nut, 5/16-18 Jam	NI	8746	Safety Video
33	6773-2	Parking Brake Handle	141	07.40	Calcty 11000
34	6442	Brake Handle Cover			
35	9057	Nut, 1/4-20 Toplock			
36	8215-2	Rear Brake Rod	ASM =	= Assembly	
37	8715-2	Front Brake Rod		ot Illustrated	
38	9869	Spacer, 1/4 ID x 5/16 OD x 5/8"			
39	9502	Spring, Left Wound			
40	6293-16	Pedal, Brake			
41	1847	Bolt, 1/4-20 x 1"			
42	1189	Nut, 5/16-18 Toplock			
43	9091	Washer, 3/8 Flat			
44	1447	Pedal Bolt			
45	9709	Compression Spring			
46	9188	Bolt, 1/2-13 x 1-1/2"			
47	5682	Bolt, 1/2-13 x 5-1/2"			
48	9022	Washer, 1/2 Flat			
49	1012	Nut, 1/2-13 Toplock			
50	2457-2Z	Spindle, Right			
Ni	2458-2Z	Spindle, Left			
51 52	5157-16	Spacer, 5/8 ID x 3/4"			- Paras

6309-16

1389

9503

8251 5090

5950

9309FP

1046 3802

4915

9162

10381

3548

10324H

1430

10402-2

Pedal, Throttle Bushing, 1/4 ID x 5/16"

Throttle Cable Bearing, 5/8 ID

Spring, Right Wound

Spanner, 5/8 ID x 2-1/8"

Tire, 145/70 x 6 Knobby

Nut, 3/4-10 Toplock

Tire, 18/9.5 x 8"

Wheel - 8" Black

Seat Frame

Wheel Assembly, Front (incl. 61) Nut, 5/8-11 Toplock

Inner Tube, 6" (Repair Part Only)

Wheel Asm, Rear (incl. 63-64)

Tube, 8" (Repair Part Only)

51 52

53

54

55

56

57

58

59

60

61

62

ASM

63

64

65

66