Operator's Manual SUPPLEMENT Model No. 392E-0

AWARNING:

Read Engine
Owner's Manual,
Vehicle Operator's
Manual, and
Supplement
Carefully Before
Operating Vehicle.

Parts List




1) Seek Part(s) from your models illustrated diagram, cross over REF# to PART# 2) Type PART# into sites [Search Box] at GokartsRus.com OPEN IN NEW TAB OPEN I

If a part does not come up in a Site Search, please Contact Us (include part# in email)

THIS VEHICLE IS FOR OFF-ROAD USE ONLY

BEFORE OPERATING THIS VEHICLE, THE OWNER AND/OR OPERATOR MUST UNDERSTAND THE VEHICLE WAS NOT DESIGNED OR MANUFACTURED TO MEET SPECIFICATIONS FOR USE ON STREETS, HIGHWAYS, OR THOROUGHFARES AND HAVE READ AND HAVE AN UNDERSTANDING OF ALL THE INSTRUCTIONS FOR SAFE ASSEMBLY AND OPERATION AS WELL AS THE INSTRUCTIONS GOVERNING THE ENGINE AND OTHER PORTIONS OF THE VEHICLE.

3/2000 9296r3

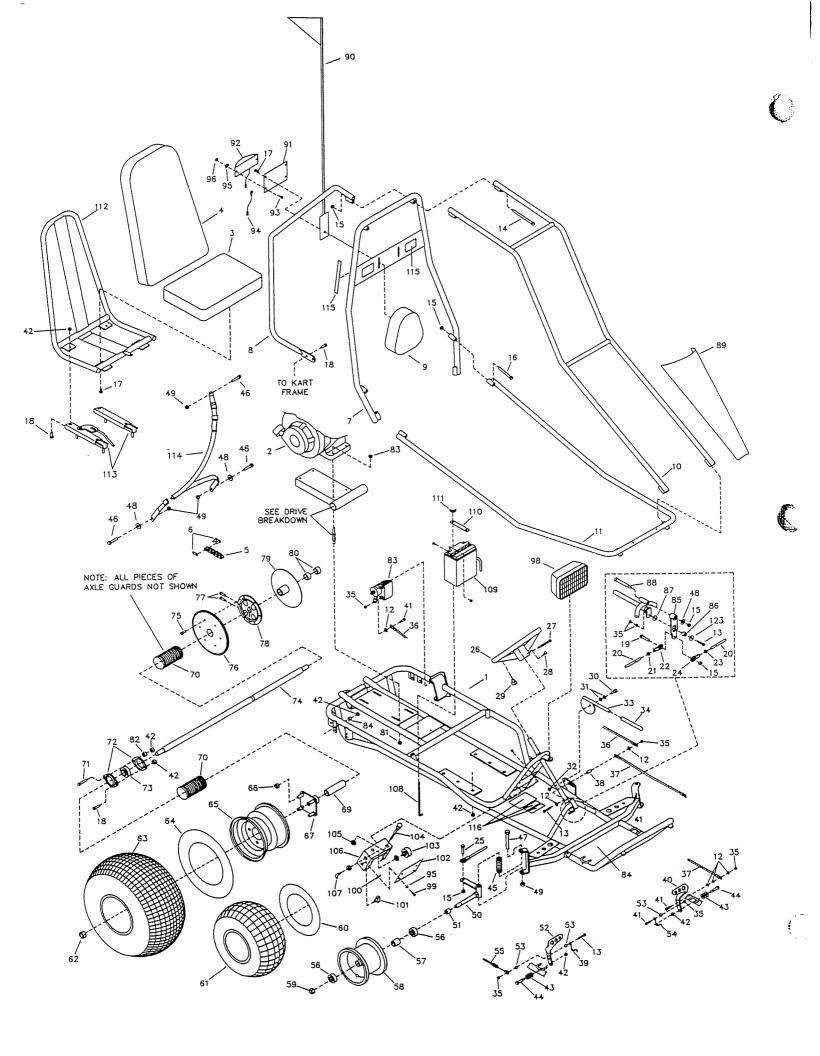

REPAIR PARTS - 392E-0

		REPAIR	7 PAR 15 - 3	592E-U	
REF.	PART		REF.	PART	
NO.	<u>NO.</u>	DESCRIPTION	NO.	NO.	DESCRIPTION
1	10711-5	Frame - Red	71	6573	Bolt, 5/16-18 x 1-3/4"
2	10421	Engine, 12HP Tecumseh	72	6617	Bearing Flange
3	5557	Seat Bottom	73	3941H	Bearing, 1" ID
. 4	8748	Seat Back	74	8223H	Axle Shaft
5	9343	Chain, 420 x 71 Links (incl. 6)	ASM	6420H	Sprocket Asm. (incl. 75-78)
6	2037	Master Link, 420 Chain	75	9006	Bolt, 1/4-20 x 1/2" Flanged Whiz
7	8711-5	Center Bar	76	6282	Sprocket, 420 x 54 Teeth
8	8702-5	Rear Bar	77	6701	Bolt, 5/16 x 1-1/4" Socket Head
9	8735	Headrest	78	6280H	Sprocket Hub
10	8714-5	Overhead Bar	79	6314H	Brake Rotor
11	8710-5	Front Bar	80	2265-16	Spacer, 1" ID x 3/4"
12	1854	Washer, No. 14 Flat	81	1263	Nut, 5/16-18 Flanged Whiz
13	1849	Bolt, 1/4-20 x 1-1/2"	82	9674-16	Spacer, 3/8 ID x 3/8"
14	6452	Bolt, 3/8-16 x 5"	83	8197	Brake Caliper Asm
15	9085	Nut, 3/8-16 Toplock	84	1441	Decal, Front Floor Pan Scuff
16	2386	Bolt, 3/8-16 x 3-1/2"	85	9834-2	Steering Crank Weldment
17	5839	Bolt, 1/4-20 x 3/4" Flanged Whiz	86	9873	Cam Follower Bearing
18 19	9176 9145	Bolt, 5/16-18 x 1" Bolt, 3/8-16 x 1-3/4"	87 88	9872 9871	Washer, 1/4 Flat
ASM	6430	Tie Rod Asm. (incl. 20-24)	89	2257	Shoulder Bolt, 1/2 x 3" Fairing
20	6431	Tie Rod	90	8445	Safety Flag
21	9092	Nut, 3/8-24 RH Jam	91	6305-2	Tail Light Bracket
22	1414	Rod End - RH	92	6508	Tail Light Assembly
23	9024	Nut, 3/8-24 LH Jam	93	9106	Bolt, #10-32 x 1/2"
24	1415	Rod End - LH	94	6319	Tail Light Ground Wire
25	9146	Bolt, 3/8-16 x 1-1/2"	95	6039	Washer, #10 Internal Lock
26	6038	Steering Wheel	96	6193	Nut, #10-32 Acorn
27	9080	Bolt, 1/4-20 x 2-3/4"	97	****	
28	9160	Bolt, 1/4-20 x 7/8" Nylock	98	10572	Headlight Assembly
29	10573	Stop Switch Assembly	99	6046	Bolt, #10-24 x 1/2"
30	9172	Bolt, 3/8 x 1/4 Shoulder	100	5135	Nut, #10 Tinnerman
31	6441	Washer, 3/8 ID Spring	101	10574	Light Switch Assembly
32	6440	Nut, 5/16-18 Jam	102	9528-2	Cover Plate
33	6773-2 6442	Parking Brake Handle	103 104	6344 6313	Start Switch w/Key
- 34 35	9057	Brake Handle Cover Nut, 1/4-20 Toplock	105	6353	Choke Cable Washer, Square Hole
35 36	8215-2	Rear Brake Rod	106	6296-2	Control Box
37	8715-2	Front Brake Rod	107	2290	Ignition Key
38	9869	Spacer, 1/4 ID x 5/16 OD x 5/8"	108	9430	Battery Hold Down Rod
39	9502	Spring, Left Wound	109	3633	Battery
40	6293-16	Pedal, Brake	110	9642-2	Battery Clamp Bar
41	1847	Bolt, 1/4-20 x 1"	111	9468	Nut, #10-32 Nylock Wing
42	1189	Nut, 5/16-18 Toplock	112	10402-2	Seat Frame
43	9091	Washer, 3/8 Flat	113	6734	Seat Slide - pair
44	1447	Pedal Bolt	114	8373	Seat Belt Shoulder / Lap
45	9709	Compression Spring	115	11329	Decal Sheet, Center Bar Warnings
46	9188	Bolt, 1/2-13 x 1-1/2"	116	11330	Decal Sheet, Main Frame and Engine Warnings
47	5682	Bolt, 1/2-13 x 5-1/2" Washer, 1/2 Flat	NI	9247R5	Assembly Instructions
48 49	9022 1012	Nut, 1/2-13 Toplock	NI	6477	Dingo Operator's Manual
50	2457-2Z	Spindle, Right	NI	8834	Tecumseh 12hp Engine Manual
NI	2458-2Z	Spindle, Left	A SM -	= Assembly	
51	5157-16	Spacer, 5/8 ID x 3/4"		ot Illustrated	
52	6309-16	Pedal, Throttle	141 14	ot mustrated	
53	1389	Bushing, 1/4 ID x 5/16"			
54	9503	Spring, Right Wound			
55	9345	Throttle Cable			
56	5090	Bearing, 5/8 ID			•
57	5950	Spanner, 5/8 ID x 2-1/8"			
58	9309FP	Wheel Assembly, Front			
59	1046	Nut, 5/8-11 Toplock			
60	3802	Inner Tube, 6"			
61	4915 9162	Tire, 145/70 x 6 Knobby			
62	91b/	Nut 3/4-10 Toplock			

9162

1412

1452

1430

1451 1428

1557H

9060

4660-16

K392

62

ASM

63

64

65

66 67

68

69 70 Nut, 3/4-10 Toplock

Wheel Asm, Rear (incl. 63-65)

Inner Tube, 8" (Repair Part Only) Wheel Rim, 8"

Tire, 22 x 11 - 8 Tubeless


Nut, 1/2-13 Cone Wheel

Spacer, 1" ID x 4-7/16"


Axle Guard Repair Kit

Wheel Hub w/Studs

Washer, 5/16" Flat

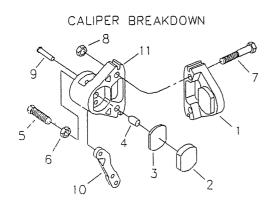


1	3 4 5 6 7 8 ASM 9	3930 3931 3932 9158 9085	Brake Lining Backing Plate Actuator Pin Adjuster Pin Nut, Jam Bolt, 3/8-16 x 2-1/4" Nut, 3/8-16 Toplock MB-1 Service Kit (incl. 9-11 Groove Pin Lever
---	---	--------------------------------------	---

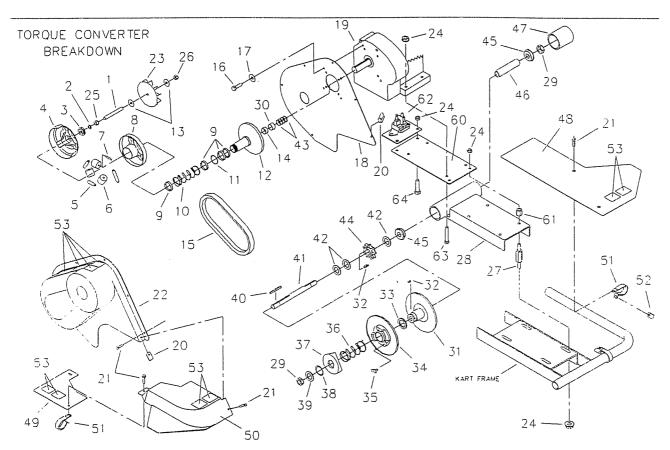

REF_NO 1 2 3 ASM 4 5 6 7 8 9 10 11 12	PART NO 8689 1130 2468 2594 2472 2470 2471 2474 2475	DESCRIPTION Stud, 3/8-24 x 4-1/4" Washer, 3/8 Split Lock Washer, Pilot Driver Pulley Assembly (incl. REF. 4-12) Cover and Drive Plate Extension Spring Cam Roller Spring Clip Moveable Face and Hub Guide Bushing Compression Spring Retaining Ring Fixed Face and Post	REF. NO. 23 24 25 26 27 28 29 30 ASM 31 32 33	PART NO 8600 1263 2388 9123 9186 8908 1466 4914 8664	DESCRIPTION Impeller Nut, 5/16-18 Flange Nut, 3/8-24 Hex Nut, 3/8-24 Toplock Hex Bolt, 5/16-18 x 1-1/2" Chassis Nut, 5/8-11 Flexlok Jam Spacer, 1" ID x 9/16 Driven Pulley Assembly (incl. REF. 31-39) Fixed Face and Post Key, 3/16sq x 1/2" Spacer Moveable Face and Cam	REF. NO. 45 46 47 48 49 50 51 52 53 55 56 57	PART NO 5090 2430 8194 8878 8922 8921 8266 8227 11330	DESCRIPTION Bearing Spanner Cap, Plastic Right Deck Cover Left Deck Cover Caliper Cover - Left Loop Clip Clip Nut Decal Sheet, Main Frame and Engine Warnings
13 14 15 16 17 18 19 20	9125 1082 6814 9101 9060 8745 10421 2449	Washer, 3/8 Flat Spacer, 1" ID x 7/16 Belt, Symmetrical Bolt, 5/16-24 x 3/4" Washer, 5/16 Plain Cover Panel Engine, 12HP Tecumseh Nut, Tinnerman	35 36 37 38 39 40 41 42	2516 2480 * 2478 2477 3403 8854 1119 3887	Button Insert Torsion Spring Fixed Cam Thrust Washer Retaining Ring Key, 3/16sq x 2" Jackshaft, 13 69" Spacer, 5/8ID x 1/8" Spacer, 1" ID x 1/16	58 59 60 61 62 63 64	9176 9030 10411 8506 8679 9186 2264	Bolt, 5/16-18 x 1" Washer, 5/16 Int. Lock Adapter Plate Engine Standoff Solenoid Assembly Bolt, 5/16-18 x 1-1/2" Bolt, 5/16-18 x 3/4"
21 22	9006 8739	Bolt, 1/4-20 x 1/2" Whiz Cover Assembly	43 44	1125S	Sprocket, 9T #420		M = Assemb	

WIRING DIAGRAM

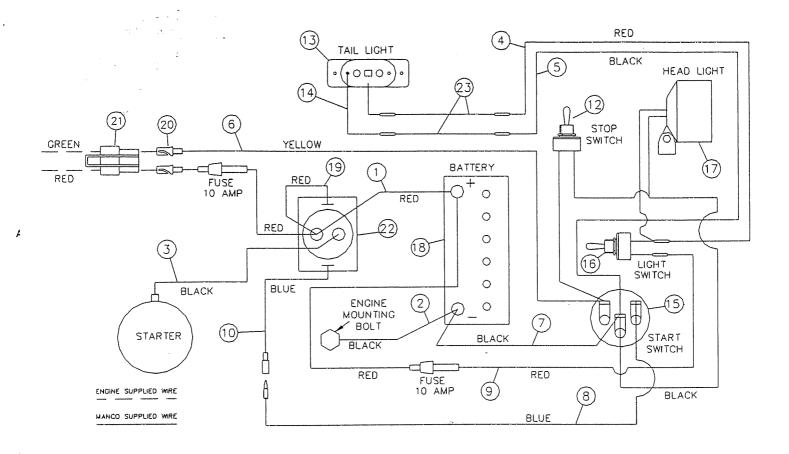

REF	PART		REF	PART		
NO.	NO.	DESCRIPTION	<u>NO.</u>	<u>NO.</u>	DESCRIPTION	
1	3611	Battery Cable, Red 9 in.	13	6508	Tail Light Assembly	
2	3610	Battery Cable, Black 9 in.	14	6319	Wire, Taillight Ground	
3	3611	Battery Cable, Red 9 in.	15	6344	Start Switch	
ASM	9376P	Wiring Harness (incl. 4-9)	16	10574	Light Switch Assembly	
4		Wire, Taillight/Light Switch (Red)	17	10572	Headlight Assembly	
5		Wire, Taillight/Switch (Black)	NI	2964	Headlight Bulb	
6		Wire, Engine/Switch (Yellow)	18	3633	Battery	
7		Wire, Batt Gnd/Switch (Black)	19	2093	Solenoid Jumper Wire Assembly	
8		Wire, Solenoid/Switch (Blue)	20	10437	Terminal, PE Male Spade	
9		Wire, Solenoid/Light Switch (Red)	21	10438	Housing, PE	
10	8281	Start Wire Adapter	22	2084	Solenoid	
» 11		•	23	8504	Extension Wire Assembly	
"NI	6378	Poly Loom 1/2" per foot	NI	9389	Fuse, 10 Amp	
NI /	6763	Poly Loom "Tee"	NI	6304-2	Solenoid Bracket, Black -	
.NI	6813	Poly Loom "Outlet"	~ ~			
12.	10573	Stop Switch Assembly	NI = Not Illustrated			

ORDERING PARTS

ASM = Assembly

1) Seek Part(s) from your models illustrated diagram, cross over REF# to PART#

2) Type PART# into sites [Search Box] at GoKartsRus.com OPEN IN NEW TAB OPEN I

3) Add all needed parts to Shopping Cart | Complete "Checkout" | ✓ Done!

If a part does not come up in a Site Search, please Contact Us (include part# in email)