
## **Operator's Manual** SUPPLEMENT

MANCO MODEL NO. 405-062 405-09 405-091 W TECUMSEN Ship

**WARNING: Read Engine** Owner's Manual, **Vehicle Operator's** Manual, and **Supplement Carefully Before Operating** Vehicle.

**Parts List** 

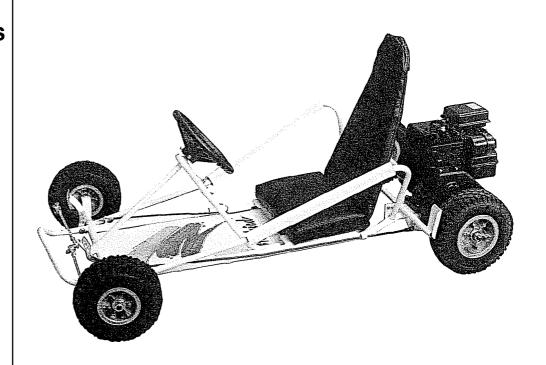




## **ORDERING PARTS**

1) Seek Part(s) from your models illustrated diagram, cross over REF# to PART#


2) Type PART# into sites [Search Box] at GoKartsRus.com TIPI- RIGHT CLICK LINK, SELECT OPEN IN NEW TAB THE STATE OF THE SELECT OPEN IN NEW TAB THE STATE OF THE SELECT OPEN IN NEW TAB THE STATE OF THE SELECT OPEN IN NEW TAB THE SELECT OPE

3) Add all needed parts to Shopping Cart | Complete "Checkout" | ✓ Done!

If a part does not come up in a Site Search, please Contact Us (include part# in email)

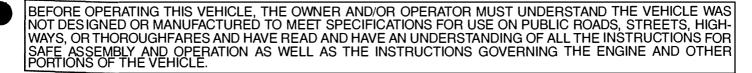

10/94

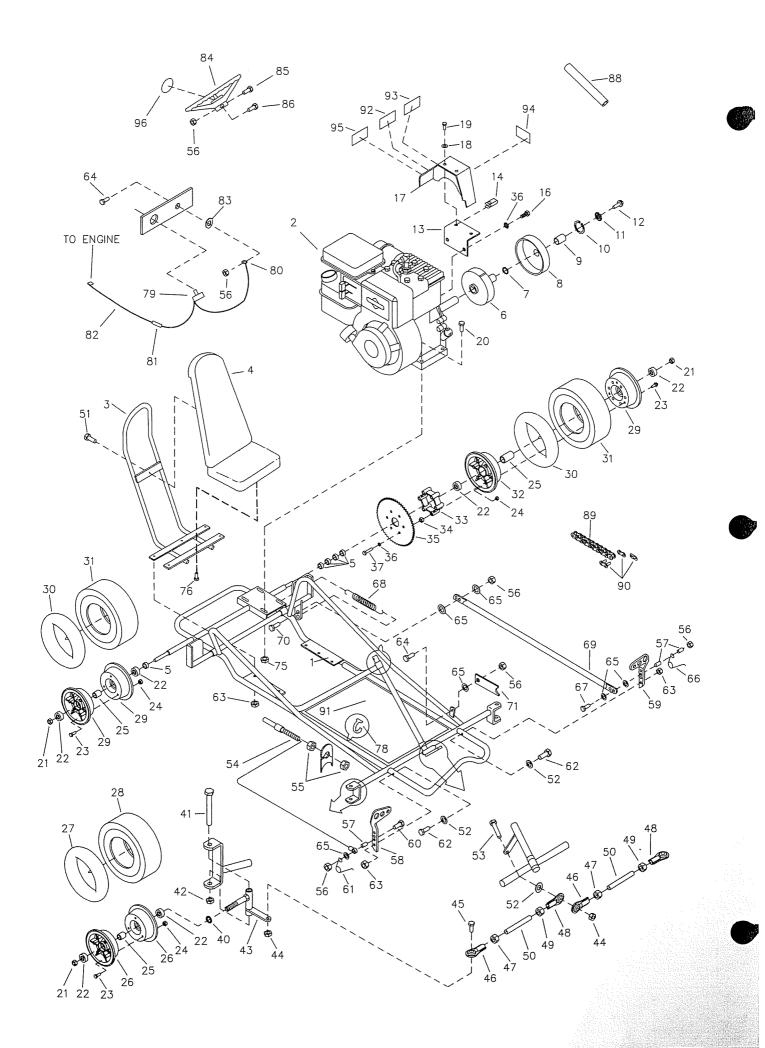


## REPAIR PARTS - MODEL 405-062/09

REPAIR PARTS - MODEL 405-002/05					
DEE	PART		REF	PART	
REF		DESCRIPTION	NO.	NO.	DESCRIPTION
NO.	<u>NO.</u>		53	9145	Bolt, 3/8-16 x 1.75"
1	6219-18	Frame	54	1390	Throttle Cable w/ Housing (inc. REF 55)
2	6010	Engine, 5hp	55	9058	Nut, 5/16-24 Jam
3	3347-2	Seat Frame	56	9057	Nut, 1/4-20 Toplock
4	4324	Seat Pad	57	1389	Bushing
5	1119	Spacer, 5/8 ID x 1/8"	58	1437	Pedal, Throttle
ASM		Clutch Assembly (inc. REF 6-10)	59	1436	Pedal, Brake
6	4496	Clutch Rotor	60	1847	Bolt, 1/4-20 x 1.00"
7	3146	Washer, Fiber	61	9502	Spring, Left Wound
8	4491	Drum w/ Sprocket (inc. REF 9)	62	9110	Bolt, 5/16-18 x 1.75"
9	3143	Bushing	63	1189	Nut, 5/16-18 Toplock
10	3141	Snap Ring	64	1845	Bolt, 1/4-20 x .625"
11	9001	Washer, 3/8 Int/Ext Lock	65	1854	Washer, #14 Flat
12	1491	Bolt, 5/16-24 x .75"	66	9503	Spring, Right Wound
13	3363-2	Bracket, Chainguard	67	1849	Bolt, 1/4-20 x 1.50"
14	5135	Clip Nut	68	4365	Spring
15	0404	D-H 5/16 24 × 50"	69	5097	Brake Rod
16	9101	Bolt, 5/16-24 x .50"	70	1846	Bolt, 1/4-20 x .75"
17	3362	Chainguard	71	1982	Pedal Latch
18	6039	Washer, #10 Lock Screw, #10-24 x .50"	72		
19	6046	Bolt, 5/16-18 x 1.50"	73		
20	9186 1046	Nut, 5/8-11 Toplock	74		
21		Front Wheel Assembly (inc. REF 22-28)	75	1263	Nut, 5/16-18 Flange
ASN		Idle Wheel Asm (inc. REF 22-25,29-31)	76	1876	Bolt, 1/4-20 x 5/8" Whiz Flange
ASN		Drive Wheel Asm (inc. REF 22-25,29-37)	77		
ASN			78	1019	Ty-Wrap
22	1093	Bearing Bolt, 1/4-20 x .75"	ASM	4419	Stop Switch Assembly (inc. REF 79-82)
23	5839		79	1392	Stop Switch
24 25	1186 5949	Nut, 1/4-20 Spanner	80	1393	Ring Terminal
26 26	5158	Wheel Half, Front 4"	81	2650	Butt Connector
27	1053	Tube, Front 4"	82	5642	Wire w/ Terminal
28	2244	Tire, Front 4.10/3.50 x 4" Knobby	83	5732	Washer, 1/4 Int/Ext Lock
29 29	8004	Wheel Half, Rear 5" Untapped	84	6038	Steering Wheel
30	1753	Tube, Rear 5"	85	9080	Bolt, 1/4-20 x 2.75"
31	2246	Tire, Rear 4.10/3.50 x 5" Knobby	86	9160	Bolt, 1/4-20 x .875"
32	8006	Wheel Half, Rear 5" Tapped	87		
33		Spacer	88	5934	Arm Pads w/ Covers (QTY 2) (Starbird)
34		Nut, 3/8-24		9328	Arm Pads w/ Covers (QTY 2) (White Fox)
35		Sprocket, #35 Chain x 60 Teeth	89	8050	Chain, #35 x 68 Pitch (inc. REF 90)
36		Washer, 5/16 Lock	90	1269	Master Link, #35 Chain
37		Bolt, 5/16-18 x 2.25"	91	6221	Decal, Floor Pan (Starbird)
38				9329	Decal, Floor Pan (White Fox)
39			92	1049	Decal, Caution
40	1937	Spacer, 5/8 ID x .25" Thick	93	4912	Decal, Warning
41	1264	Bolt, 1/2-13 x 3.50"	94	6791	Decal, Oil Clutch
42		Nut, 1/2-13 Toplock	95	6621	Decal, Tire Pressure Decal, Steering Wheel Cntr(Starbird)
43	8021	Spindle, Right Side	96	3296	Decal, Steering Wheel Chtr(White Fox)
Ni		Spindle, Left Side	N.11	5946	
44		Nut, 3/8-16 Toplock	NI	4350	Vehicle Operator's Manual
45		Bolt, 3/8-16 x 1.50"	NI	2600	Engine Owner's Manual
ASI		Tie Rod Assembly (inc. REF 46-50)			
46		Tie Rod End, Right Hand Thread			
47		Nut, 3/8-24 Jam, Right Hand Thread			
48		Tie Rod End, Left Hand Thread			
49		Nut, 3/8-24 Jam, Left Hand Thread	ASM = Assembly		
50		Tie Rod	NI =	Not Illust	trated
51	9006	Bolt 1/4-20 x 5" Whiz Flange			

Bolt, 1/4-20 x .5" Whiz Flange Washer, 3/8 Flat

## THROTTLE CABLE INSTALLATION

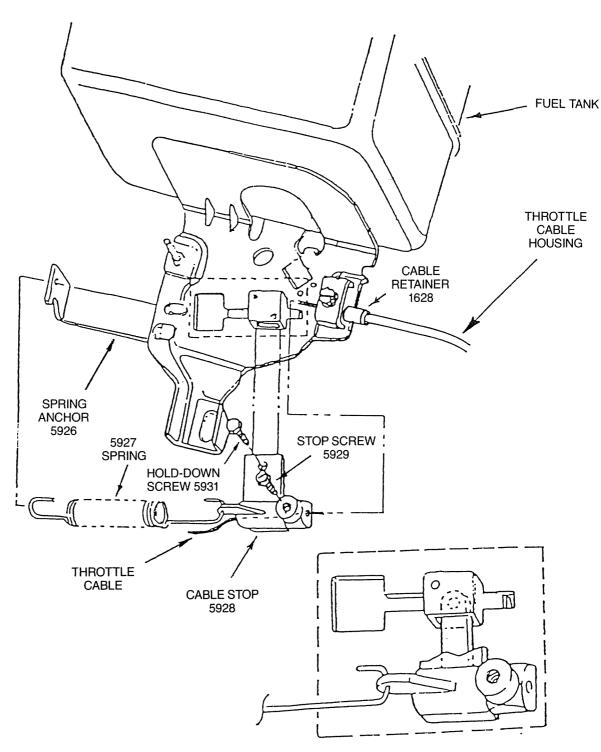

**ASSEMBLY:** Pass the throttle cable through the cable retainer and butt the throttle cable housing end against the inside shoulder of the cable retainer. (The cable retainer is to be securely fastened to the engine with the clamping screw.) Pass the end of the Throttle Cable through the hole in the cable stop. Before tightening cable stop screw:

- 1. Ensure spring anchor, spring, and cable are installed as illustrated above.
- 2. Ensure throttle pedal is in rearward (idle) position.
- 3. Ensure that there is no slack in the throttle cable with no tension applied to return spring.
- 4. Ensure cable housing is inside and against the cable retainer.