
Operator's Manual SUPPLEMENT


MANCO MODEL NO. 415-16 415-19

WARNING: Read Engine Owner's Manual, Vehicle Operator's Manual, and Supplement Carefully Before Operating Vehicle.

Parts List

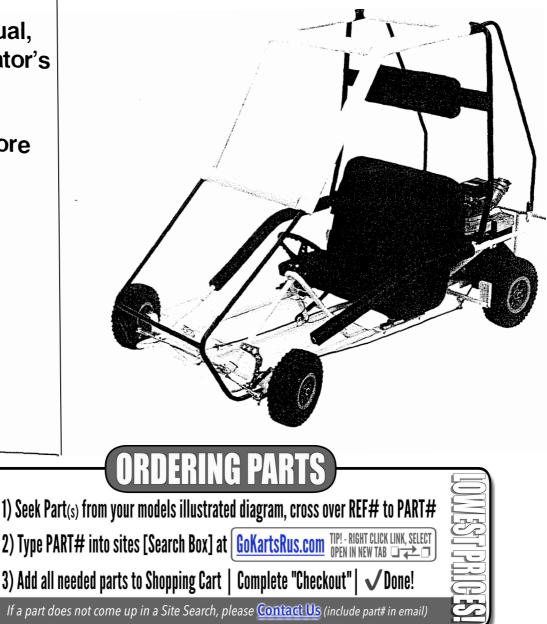

BEFORE OPERATING THIS VEHICLE, THE OWNER AND/OR OPERATOR MUST UNDERSTAND THE VEHICLE WAS NOT DESIGNED OR MANUFACTURED TO MEET SPECIFICATIONS FOR USE ON PUBLIC ROADS, STREETS, HIGH-WAYS, OR THOROUGHFARES AND HAVE READ AND HAVE AN UNDERSTANDING OF ALL THE INSTRUCTIONS FOR SAFE ASSEMBLY AND OPERATION AS WELL AS THE INSTRUCTIONS GOVERNING THE ENGINE AND OTHER PORTIONS OF THE VEHICLE.

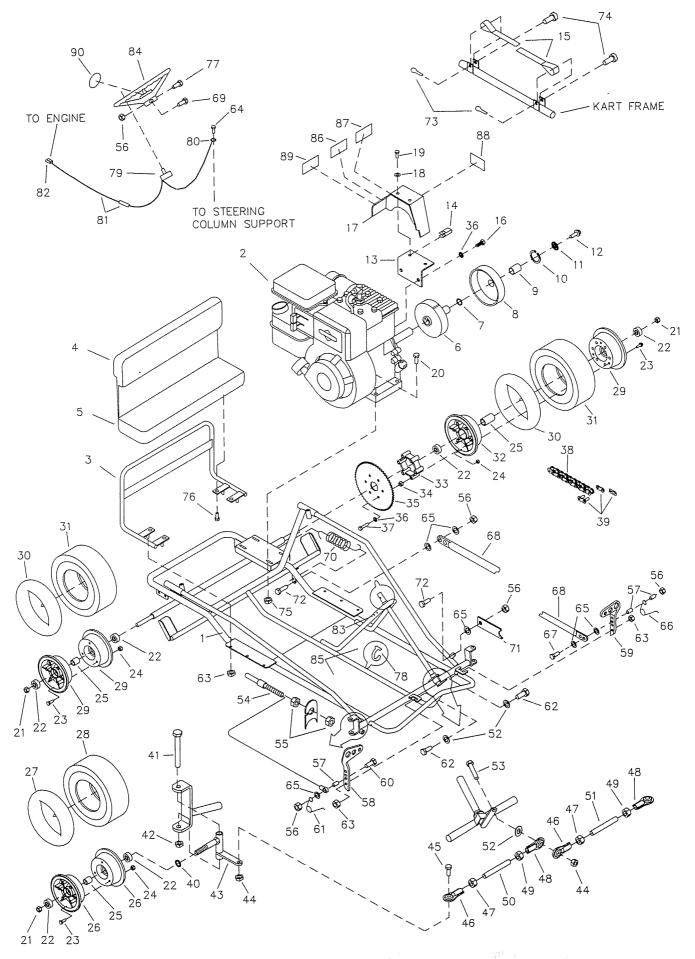


and the second secon

REPAIR PARTS - MODEL 415-16/-19


		PART		REF	PART	
	REF		DESCRIPTION	NO.	NO.	DESCRIPTION
	<u>NO.</u>	<u>NO.</u>		53	9145	Bolt, 3/8-16 x 1-3/4"
	1	9575-18	Frame	54	1390	Throttle Cable w/ Housing (inc. REF 55)
	2	6010	Engine, 5hp	55	9058	Nut, 5/16-24 Jam
	3	3325-2	Seat Frame	56	9057	Nut, 1/4-20 Toplock
	4	4328	Seat Back	57	1389	Bushing
	5	4327	Seat Bottom	58	1437	Pedal, Throttle
	ASM	4335	Clutch Assembly (inc. REF 6-10)	59	1436	Pedal, Brake
	6	4496	Clutch Rotor		1847	Bolt, 1/4-20 x 1"
	7	3146	Washer, Fiber	60		
	8	4491	Drum w/ Sprocket (inc. REF 9)	61	5902	Spring, Left Wound
	9	3143	Bushing	62	9110	Bolt, 5/16-18 x 1-3/4"
	10	3141	Snap Ring	63	1189	Nut, 5/16-18 Toplock
	11	9001	Washer, 3/8 Int/Ext Lock	64	9796	Screw, 12-24 x 1/2" Self Tapping
	12	1491	Bolt, 5/16-24 x 3/4"	65	1854	Washer, #14 Flat
	13	3363-2	Bracket, Chainguard	66	5903	Spring, Right Wound
	14	5135	Clip Nut	67	1849	Bolt, 1/4-20 x 1-1/2"
	15	4372	Handhold Strap	68	5097	Brake Rod
	16	9101	Bolt, 5/16-24 x 1/2"	69	9160	Bolt, 1/4-20 x 7/8"
	17	3362	Chainguard	70	9780	Spring
	18	6039	Washer, #10 Lock	71	1982	Pedal Latch
	19	6046	Screw, #10-24 x 1/2"	72	1846	Bolt, 1/4-20 x 3/4''
	20	9186	Bolt, 5/16-18 x 1-1/2"	73	9116	Cotter Pin
	21	1046	Nut, 5/8-11 Toplock	74	9118	Clevis Pin
	ASM	2497	Front Wheel Assembly (inc. REF 22-28)	75	1263	Nut, 5/16-18 Flange
	ASM			76	9189	Bolt, 1/4-20 x 7/8"
	ASM		Drive Wheel Asm (inc. REF 22-25,29-37)	77	9080	Bolt, 1/4-20 x 2-3/4"
				78	1019	Ty-Wrap
	22	1093	Bearing	ASM	9799	Stop Switch Assembly (inc. REF 79-81)
	23	5839	Bolt, 1/4-20 x 3/4"	79	1392	Stop Switch
	24	1186	Nut, 1/4-20	80	1393	Ring Terminal
	25	5949	Spanner	81	1394	Wire, 50" w/Splice Connector
	26	5158	Wheel Half, Front 4"	82	3135	Blade Terminal
	27	1053	Tube, Front 4"	83	1463	Bushing, Insulating
	28	2244	Tire, Front 4.10/3.50 x 4" Knobby	84	6038	Steering Wheel
	29	8004	Wheel Half, Rear 5" Untapped	85	6222	Decal, Floor Pan (415-16)
	30	1753	Tube, Rear 5"		9330	Decal, Floor Pan (415-19)
	31	2246	Tire, Rear 4.10/3.50 x 5" Knobby	86	1049	Decal, Caution
	32	8006	Wheel Half, Rear 5" Tapped	87	4912	Decal, Warning
	33	8008	Spacer	88	6791	Decal, Oil Clutch
	34	2388	Nut, 3/8-24	89	6612	Decal, Tire Pressure
	35	8007	Sprocket, #35 Chain x 60 Teeth	90	3296	Decal, Steering Wheel Cntr (415-16)
	36	9030	Washer, 5/16 Lock	90	5946	Decal, Steering Wheel Cntr (415-19)
	37	9127	Bolt, 5/16-18 x 2-1/4"	NU	4350	Vehicle Operator's Manual
	38	6073	Chain, #35 x 72 Pitch (inc. REF 39)	NI		Engine Owner's Manual
	39	1269	Master Link, #35 Chain	NI	2601	-
	40	1937	Spacer, 5/8 ID x 1/4" Thick	NI	9212R1	Assembly Instructions
	41	1264	Bolt, 1/2-13 x 3-1/2"	NI	9677	Decal, Hot Surfaces
	42	1012	Nut, 1/2-13 Toplock	NI	9678	Decal, Warning: Engine Exhaust
	43	8021	Spindle, Right Side	NI	9679	Decal, No Riders Allowed
	NI	8020	Spindle, Left Side	NI	5964	Decal, Oil Warning
	44	9085	Nut, 3/8-16 Toplock			
	45	9146	Bolt, 3/8-16 x 1-1/2"			
	ASM		Tie Rod Assembly (inc. REF 46-50)			
	ASM		Tie Rod Assembly (inc. REF 46-49,51)ASM = AssemblyTie Rod End, Right Hand ThreadNI = Not Illustrated		nblv	
	46	1414			-	
	40	9092	Nut, 3/8-24 Jam, Right Hand Thread	· IVI	not nust	
	47 48	9092 1415	Tie Rod End, Left Hand Thread			
		9024	Nut, 3/8-24 Jam, Left Hand Thread			
•	49 50	9024 5003	Tie Rod, Long			
	50 51	4356	Tie Rod, Short			
	51	4000	Masher 3/8 Flat			

52 9091 Washer, 3/8 Flat

a the state of the

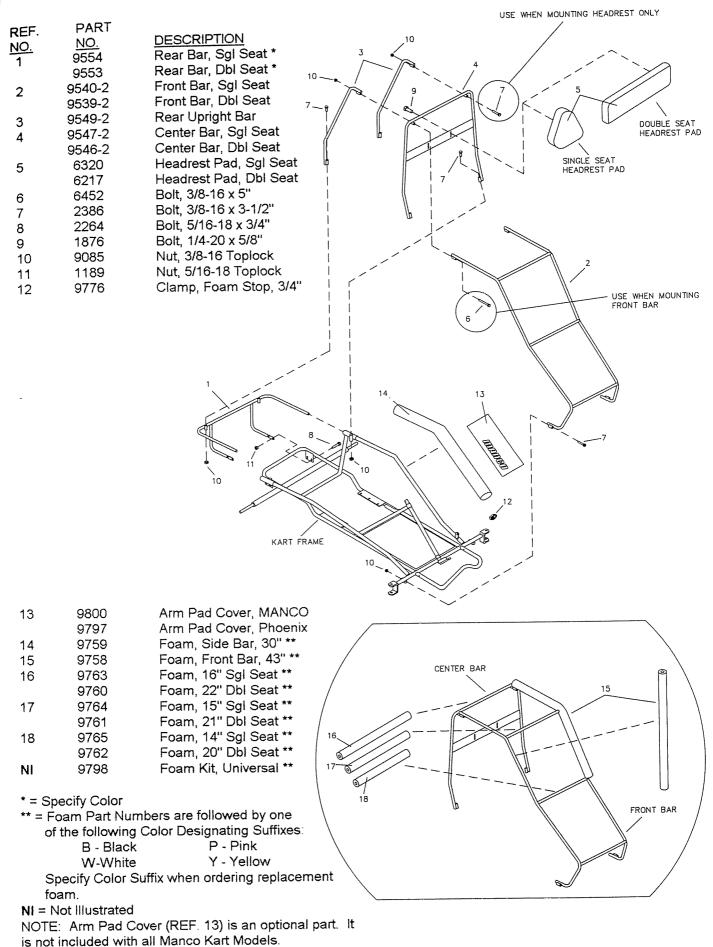

THROTTLE CABLE INSTALLATION

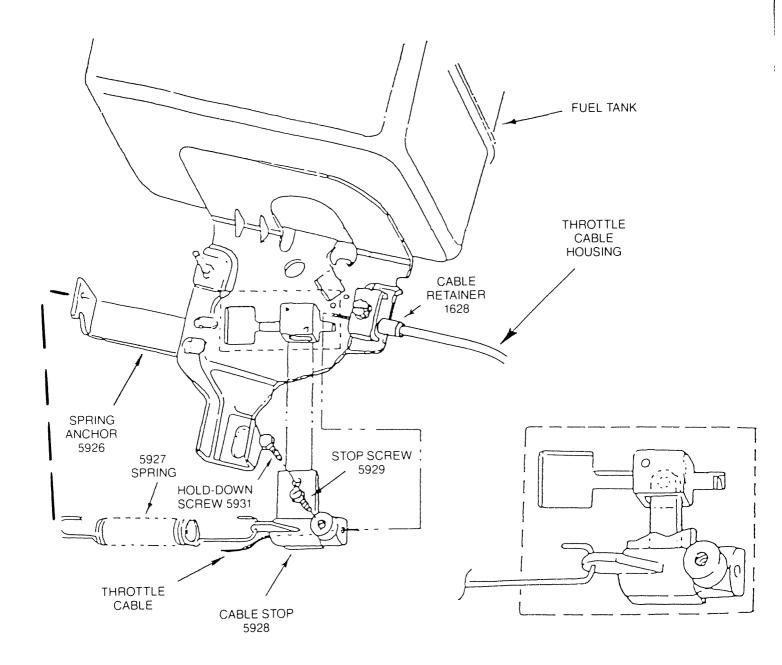

ASSEMBLY: Pass the throttle cable through the cable retainer and butt the throttle cable housing end against the inside shoulder of the cable retainer. (The cable retainer is to be securely fastened to the engine with the clamping screw.) Pass the end of the Throttle Cable through the hole in the cable stop. Before tightening cable stop screw:

- 1. Ensure spring anchor, spring, and cable are installed as illustrated above.
- 2. Ensure throttle pedal is in rearward (idle) position.

diam's and

- 3. Ensure that there is no slack in the throttle cable with no tension applied to return spring.
- 4. Ensure cable housing is inside and against the cable retainer.

MAINTENANCE RECORD

WORK DONE	DATE	WORK DONE
		I
	1	
	-	

