Operator's Manual SUPPLEMENT

MODEL NO. 703-01


WARNING: Read Engine Owner's Manual, Vehicle Operator's Manual, and Supplement Carefully Before Operating Vehicle.

Parts List



THIS VEHICLE IS FOR OFF-ROAD USE ONLY


BEFORE OPERATING THIS VEHICLE, THE OWNER AND/OR OPERATOR MUST UNDERSTAND THE VEHICLE WAS NOT DESIGNED OR MANUFACTURED TO MEET SPECIFICATIONS FOR USE ON PUBLIC ROADS, STREETS, HIGH-WAYS, OR THOROUGHFARES AND HAVE READ AND HAVE AN UNDERSTANDING OF ALL THE INSTRUCTIONS FOR SAFE ASSEMBLY AND OPERATION AS WELL AS THE INSTRUCTIONS GOVERNING THE ENGINE AND OTHER PORTIONS OF THE VEHICLE.

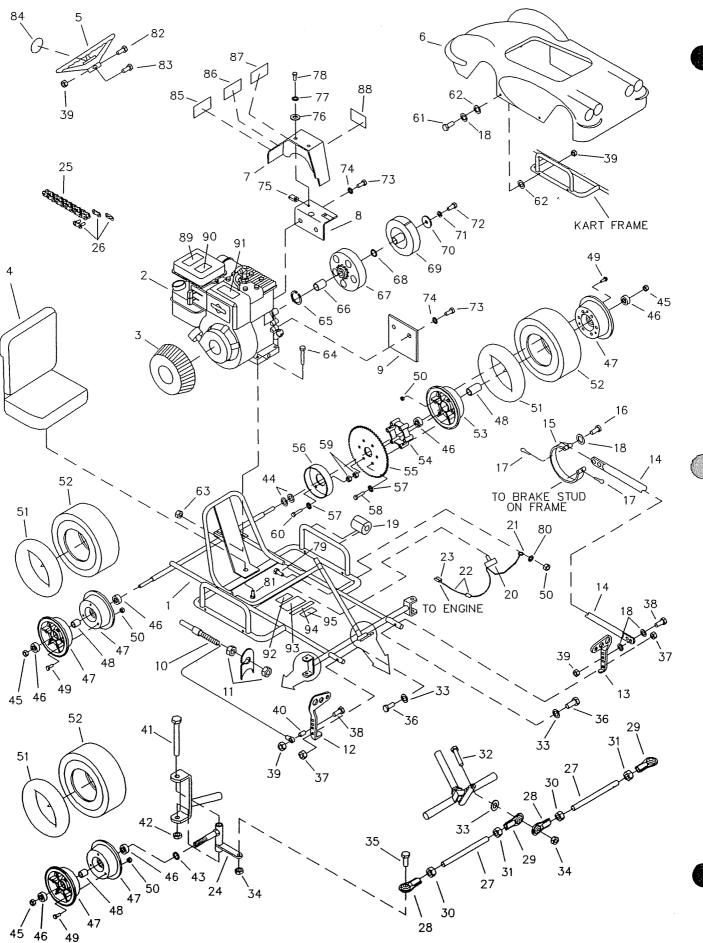

REPAIR PARTS - MODEL 703-01

				DEE	DADT	
	REF.	PART		REF.	PART <u>NO.</u>	DESCRIPTION
	<u>NO.</u>	<u>NO.</u>		<u>NO.</u> 54	8008	Spacer, Sprocket
	1	5902-2	Frame	54 55	1100	Sprocket #35 x 72P
	2	8049 6237	Engine, 3.5hp Finger Guard, Recoil Housing	56	1246	Brake Drum 4"
	3 4	6237 1976	Seat	57	9030	Washer, 5/16 Interlock
	4 5	6038	Steering Wheel	58	9127	Bolt, 5/16-18 x 2-1/4"
	6	5903	Body, Corvette w/Decals	59	2388	Nut, 3/8-24
	7	6423	Guard, Sprocket/Chain	60	9051	Bolt, 5/16-18 x 3"
	8	3363-2	Chain Guard, Mounting Bracket	61	1849	Bolt, 1/4-20 x 1-1/2"
	9	6960-2	Brake Pin Bracket	62	3463	Washer, 1/4 Rubber
	10	1390	Throttle Cable (incl. 11)	63	1263	Nut, 5/16-18 Whiz Flange
	11	9058	Nut, 5/16-24 Jam	64	9186	Bolt, 5/16-18 x 1-1/2"
	12	3437	•	ASM	4335	Clutch Asm. (incl. 65-69)
	13	3436	Pedal, Brake	65	3141	Snap Ring
	14	5011	Brake Rod	66	3143	Bushing
	15	1036	Brake Band w/Retainer	67	4491	Drum w/Sprocket (incl. 66)
	16	9118	Clevis Pin	68	3146	Washer, Fiber
	17	9116	Cotter Pin	69 70	4496	Clutch Rotor
	18	1854	Washer, No. 14 Flat	70	1943	Washer, 9/32 ID x 1-1/4 OD
	19	3843 9799	Body Support Pad Stop Switch Wire Asm. (incl. 20-23)	71 72	1115 5733	Washer, 1/4 Split Lock Bolt, 1/4-28 x 3/4"
	ASM 20	9799 1392	Stop Switch	73	9101	Bolt, 5/16-24 x 1/2"
	20 21	1392	Ring Terminal	74	9030	Washer, 5/16 Inter Lock
	22	1394	Wire, 50" w/Splice Connector	75	5135	Nut, Tinnerman
	23	3135	Blade Terminal	76	9104	Washer, #10 Flat
	NI	8020	Spindle - LH	77	6039	Washer, #10 Inter Lock
	24	8021	Spindle - RH	78	6046	Bolt, #10-24 x 1/2"
	25	6227	Chain, #35 x 80P (incl. 26)	79	1845	Bolt, 1/4-20 x 5/8"
Â	26	1269	Master Link, #35 Chain	80	5732	Washer, 1/4 Int/Ext Lock
	ASM	5020	Tie Rod Asm. (incl. 27-31)	81	9006	Bolt, 1/4-20 x 1/2"
	27	5004	Tie Rod	82	9080	Bolt, 1/4-20 x 2-3/4"
	28	1414	Rod End - RH	83	9160	Bolt, 1/4-20 x 7/8" Nylock
	29	1415	Rod End - LH	84	3296	Decal, Steering Wheel Center
	30	9092	Nut, 3/8-24 Jam - RH	85	1049	Decal, Don't Put Foot On Cover
	31	9024	Nut, 3/8-24 Jam - LH	86	4912	Decal, Warning: Guard Must Be
	32	9145	Bolt, 3/8-16 x 1-3/4"	87	6621	Decal, Tire Pressure
	33	9091	Washer, 3/8 Flat	88	6791	Decal, Oil Clutch
	34	9085	Nut, 3/8-16 Toplock	89	5964	Decal, Engine Shipped w/o Oil
	35	9146	Bolt, 3/8-16 x 1-1/2"	90	9677	Decal, Warning: Hot Surfaces
	36	9110	Bolt, 5/16-18 x 5/8 Thd - 3/8 x 7/8 Shdr		9678 5027	Decal, Warning: Engine Exhaust
	37	1189	Nut, 5/16-18 Toplock	92	5027 4504	Decal, Serial Number
	38	1846	Bolt, 1/4-20 x 3/4"	93 94	4504 8154	Decal, Warning Yellow Decal, Age Restriction
	39	9057	Nut, 1/4-20 Toplock	94 95	2832	Decal, No Passengers
	40 41	1389 1264	Bushing, .24 ID x .313 Long Bolt, 1/2-13 x 3-1/2"	NI	1019	Ty-Wraps
	41	1204	Nut, 1/2-13 Toplock	NI	3025	Vehicle Operators/Assembly Manual
	42 43	1937	Spacer, 5/8 ID x 1/4"	NI	2600	Engine Manual
	43 44	1119	Spacer, 5/8 ID x 1/8"	NI	4529	Decal, License Plate
	45	1466	Nut, 5/8-11 Flexlok Jam	INI	4525	Decal, License Flate
	ASM	5901	Idle Wheel Asm. (incl. 46-52)	NI =	Not Illustrate	he
	46	1093	Bearing, 5/8 ID		I = Assembly	
	47	8004	Wheel Half 5" Untapped		, , , , , , , , , , , , , , , , , , , ,	
	48	5949	Spanner, 5/8 ID x 1-13/16"			
	49	5839	Bolt, 1/4-20 x 3/4" Whiz Flange			
	50	1186	Nut, 1/4-20 Whiz			
	51	1753	Inner Tube			
	52	6035	Tire, 4.10 - 3.50 x 5" Slick			
	ASM	6422	Drive Wheel Asm. (incl. 46-52 &			
			53-60)			
	53	8006	Wheel Half 5" Tapped			

THROTTLE CABLE INSTALLATION

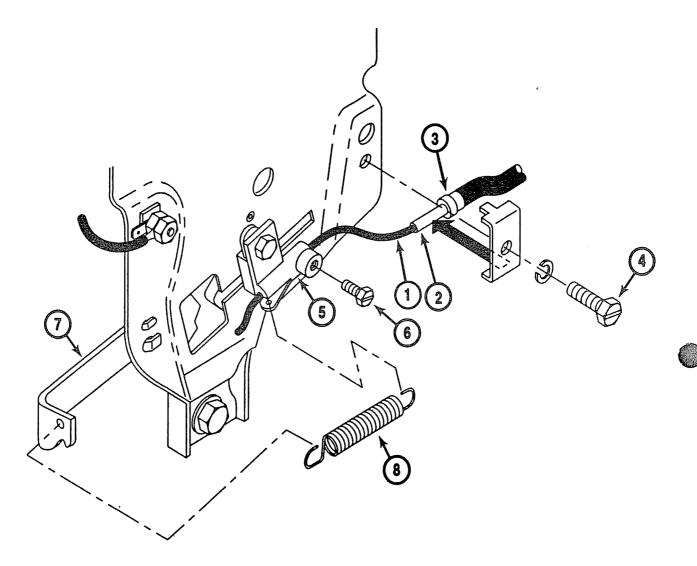

ASSEMBLY: Pass the Throttle Cable (Item 1) through the 1628 Cable Retainer (Item 2) and butt the Throttle Cable Housing End (Item 3) against the Inside Shoulder of the 1628 Cable Retainer (Item 2). The 1628 Cable Retainer (Item 2) is to be securely fastened to the engine with the Clamping Screw (Item 4). Pass the Wire End of the Throttle Cable Housing (Item 1) through the hole in the 5928 Cable Stop (Item 5). Before tightening 5929 Cable Stop Screw (Item 6):

- 1. Ensure 5926 Spring Anchor (Item 7), 5927 Spring (Item 8) and Throttle Cable are installed as illustrated above.
- 2. Ensure throttle pedal is in rearward (idle) position.
- 3. Ensure that there is no slack in the Throttle Cable Wire End (Item 1) with no tension applied to the spring (Item 8).
- 4. Ensure Throttle Cable Housing End (Item 3) is inside and against the 1628 Cable Retainer (Item 2).

